



IMPORTANT SAFETY INSTRUCTIONS



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

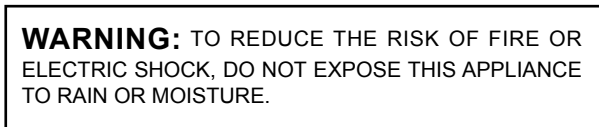

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.



CAUTION

1. Please read and retain these safety instructions.
2. Heed all warnings in the operating instructions and on the appliance.
3. Do not use this appliance near water or moisture.
4. Clean only with a dry cloth.
5. Install in a good quality 19" equipment rack
6. Do not install near sources of heat such as radiators, heat registers, stoves or other apparatus that produce heat (such as amplifiers).
7. Refer all servicing to authorised personnel.
8. Servicing is required when the appliance has been damaged in any way including: Impact damage, power cord/ supply damage, liquid spillages, small objects falling into the unit or exposure to moisture. In addition please refer to authorised service personnel if the appliance is not operating normally.
9. To completely disconnect this equipment from the AC mains disconnect the power plug from the AC receptacle.
10. To prevent fire never place the appliance near any naked flame such as a candle.
11. This is a CLASS 1 device and shall be connected to a mains socket with a protective earth connection.
12. Do not defeat the purpose of the polarized or grounding type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are there for your safety. If the plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.



Management of WEEE ((Waste Electrical and Electronic Equipment) Applicable in member states of the European Union and other European countries with individual nation policies on the management of WEEE) The symbol on the product or its packaging indicates that this product may not be treated as regular household waste. It should be returned to the retailer where the product was purchased or local collection systems should be used to ensure environmentally safe recycling.



SX2200 Series

SURGE ELIMINATOR & POWER CONDITIONER

Installation Instructions:

Caution:

SurgeX® 2200 series products permit a maximum 16A (SX2216 models), 15A (SX2215 models), 13A (SX2213 models) or 10A (SX2210 models) total output load, each outlet is capable of providing the maximum load individually. Make sure that the total does not exceed the current limit of your mains receptacle.

For safety please plug your SurgeX® unit into a fused receptacle (T20AL 250V fuse recommended).

SurgeX® Series Mode® Protection is Live-Neutral only, if the polarity indicator is illuminated when connected to the mains please replace the plug observing correct polarity.

Mounting

The SurgeX® SX2200 series are designed to be installed in a 19 inch equipment rack and require two units (2-U) of rack space. Remove the product from its packaging and slide it into place in the rack, being careful to feed the power cord into the rack first. Guide the power cord and plug so that they do not get caught or jammed as the product is installed.

230 Volt Connections

Connect power to the unit by plugging the cord into a 230V mains receptacle. The SX2200 series must be plugged into the appropriate properly polarized receptacle.

| Model | Standard | Total Load | Receptacle |
|--------|----------|------------|---|
| SX2210 | AS3112 | 10A | Australian style receptacle |
| SX2213 | BS1363 | 13A | British style receptacle |
| SX2215 | BS546 | 15A | South African / Indian style receptacle |
| SX2216 | CEE7/7 | 16A | European style receptacle |

The SX2200 series have a total of six rear AC outlets: five switched and one always on. The SX2200 series also feature a front panel courtesy outlet, which is always on (excluding RL models). Plug the equipment into the always-on and switched AC outlets as needed to power the equipment.

The always-on and courtesy receptacles (where fitted) provide power as long as it is supplied to the SurgeX®. The five switched rear receptacles provide power only when the front panel switch is on and, in the case of RT products, when the remote control input is also activated.

Indicator Lights

The SX2200 series have two, three or four indicator lights on the front panel depending on the model. All models feature a polarity indicator lamp on the rear panel:

Amber polarity light (Rear panel, all products): When illuminated indicates that live and neutral are reversed and your SurgeX product will not work as intended. If you are using an SX2216 (European CEE7/7 connectivity) simply reverse the connection. If you are using an SX2210, SX2213 or SX2215 consult an electrician to correctly wire your receptacle and establish proper polarity.

Red Power Light (All products): indicates that power is supplied to the unit and the power switch is turned on.

Green Self-Test Light (All products): indicates that power is supplied to the unit and the internal surge protection circuitry is fully functional.

Orange Over/Under Voltage Protection Light (RT & RL products): indicates that the mains voltage is below 190 volts or above 280 volts.

Yellow Remote Light (RT products): indicates that the remote control is active and the rear switched receptacles are on. (The power switch must also be on).

Task Lamp Connectors (RL Only)

The RL version has provision for two task lamps. Plug the lamps into the two three-pin XLR connectors on the front panel and use the dimmer to set a suitable brightness. Standard or HI brightness lamps can be used. Each connector can supply up to 5 Watts maximum. LED type lamps can be used with the RL but the dimmer must be set fully clockwise.

CAUTION: Do not repeatedly turn an RT / RL product on-off-on-off with a heavy load connected. The *ICE*[®] circuitry absorbs the inrush energy each time the unit is turned on and may overheat if this is done repeatedly in a short period of time. Wait one minute between repeated on/off cycles.

Remote Control (RT Products Only)

Remote control connections are wired to the green 7-pin plug-in Phoenix terminal block on the rear of the unit next to the power cord. The terminal block is shipped with a jumper wire between pins 1 & 2 so that the unit can be used without a remote control connection. If you will be using a remote control you will first need to remove this jumper wire. You can unplug the terminal block to make connections and after you have made the connections to the terminal block, plug it back into the connector on the rear of the unit. Never solder (tin) wires before inserting into a terminal block – solder cold flows and you will eventually have loose connections!

The connections are as follows:

| | |
|--------------------------|--|
| <input type="checkbox"/> | Pin 1 -- Contact Closure |
| <input type="checkbox"/> | Pin 2 -- Contact Closure / Applied Voltage + |
| <input type="checkbox"/> | Pin 3 -- Applied Voltage - |
| <input type="checkbox"/> | Pin 4 -- Remote LED + |
| <input type="checkbox"/> | Pin 5 -- Remote LED - |
| <input type="checkbox"/> | Pin 6 -- Aux Relay Contact |
| <input type="checkbox"/> | Pin 7 -- Aux Relay Contact |

Control Connections

Control of the switched receptacles can be accomplished by using a switch (contact closure), another SurgeX[®] RT product, or by an applied voltage (5 to 30 volts DC). When using a switch, choose a switch with gold contacts for the best long term reliability.

Connections are made to terminal block pins 1, 2 & 3 as follows:

- Connect switch contacts, a contact closure, or SurgeX[®] control to pins 1 and 2.

Or:

- Connect an applied DC voltage to pins 2 and 3. The positive must be connected to pin 2 and the negative must be connected to pin 3.

Remote Indicator LED

Connecting the Remote LED is optional. An LED connected to pins 4 and 5 will indicate when the switched receptacles are on. 10mA of current is available at this output, but you **must use a series resistor** if you are using your own LED. For most LEDs a 1K resistor will provide suitable brightness. If you need less brightness use a larger value of resistor, and if you need more brightness use a smaller value of resistor.

- Connect the LED positive wire to Pin 4
- Connect the LED negative wire to Pin 5

Auxiliary Relay Contacts

The auxiliary relay contacts, pins 6 & 7, provide a way to cascade units or to provide confirmation feedback to a central controller. When the switched receptacles are on, the aux relay contacts are closed. There is a 1 second delay before the aux relay closes which gives time for the SurgeX[®] Inrush Current Elimination (*ICE*[®]) circuit to operate. This short delay in combination with the SurgeX[®] *ICE*[®] makes it unnecessary to sequence the power to several large loads (such as amplifiers) because of inrush current. SurgeX[®] RT products, when cascaded, can turn on a bank of large amplifiers with no inrush current, and therefore no risk of blowing a circuit breaker.

To cascade two or more RT products, connect the aux relay contacts of one unit to the contact closure input of the next unit. To provide confirmation feedback, connect the aux relay contacts to an input on the central controller.

The relay contacts are rated for 1 amp at 30 V DC.



Electrical Characteristics:

| | |
|--|---|
| Protection type | SurgeX [®] Series Mode [®] |
| Nominal line to neutral voltage U ₀ (V) | 230V |
| Max.Cont. Operating Voltage U _c (V) | 260VAC |
| Voltage protective level U _p (V) | 1KV |
| Max. shorted current. (I _{sc}) | 3KA |
| Open circuit voltage (U _{oc}) | 6KV |
| TOV characteristic (UT) | TOV withstand , t _τ = 5s, U _τ = 335V; |
| Degree of protection (IP) | IP20 |
| Disconnection Device | Plug |
| Applicable Power Supply System | TN TT IT |
| Polarity indicator (near the supply cord) | Illuminated: wrong; Off: correct |

TEN YEAR WARRANTY

SurgeX[®] International Professional AC Power Products

For a period of 10 years from the date of your purchase of any SurgeX International product, SurgeX International warrants the product against defects in materials used by SurgeX International or workmanship performed by SurgeX International (a "Covered Product"). SurgeX International's obligations with respect to a Covered Product are to provide, at no charge, all labor and parts (either new or rebuilt, as determined in SurgeX International's sole discretion) necessary for the repair of the Covered Product. If SurgeX International, in its sole discretion, determines that a Covered Product is not repairable, SurgeX International will replace the Covered Product with a product of like kind, quality and functionality. In order to obtain the services under this Limited Warranty, you are responsible for delivering the Covered Product, at your sole cost, to a SurgeX International authorized distributor, and for providing the SurgeX International authorized distributor with a copy of the dealer's dated bill of sale as evidence of the date of purchase of the product.

THIS LIMITED WARRANTY IS THE SOLE AND EXCLUSIVE WARRANTY MADE BY SURGEX INTERNATIONAL WITH RESPECT TO THE PRODUCT. ALL IMPLIED WARRANTIES WITH RESPECT TO THE PRODUCT INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OR IMPLIED WARRANTIES ARISING OUT OF COURSE OF DEALING OR USAGE OF TRADE ARE HEREBY EXPRESSLY DISCLAIMED AND EXCLUDED.

This Limited Warranty does not apply to any product which is defective due to any causes beyond SurgeX International's control such as negligence, abuse, misuse, acts of god, modifications to the product or third party repair of the product.

THE LIABILITY OF SURGEX INTERNATIONAL (IF ANY) AND YOUR SOLE AND EXCLUSIVE REMEDY FOR ANY ALLEGEDLY DEFECTIVE SURGEX INTERNATIONAL PRODUCT SHALL BE LIMITED TO REPAIR OR REPLACEMENT OF THE PRODUCT IN ACCORDANCE WITH THE TERMS AND CONDITIONS OF THIS LIMITED WARRANTY. IN NO EVENT WILL SURGEX INTERNATIONAL BE LIABLE FOR ANY SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES.